

※ No compression

4K

3840x2160 HDMI1.4 DVI1.0

※ No latency

※ 10.2G SerDes



※ Clock Data Recovery



※ EDID Learning



※ Audio In and Audio Out



Trademarks:

启鼎光电®
SMARTOPCOM

宽域视讯®
INFINIDISPLAY

Smartopcom®

INFINIDISPLAY®

Support:

+86-769-21662876

tech@smartopcom.com

More products information or
services, Please visit website:
<http://www.smartopcom.com>

4K DVI Fiber Optic Extender+Audio

Model: DFX-5250T/R

Datasheet (Release V1.0)



Features

- ※ Real-time direct transmission technology, no video compression, no signal delay
- ※ Supports HDMI v1.4, DVI 1.0, single link, up to 3.4 Gbps/color, 10.2 Gbps total
- ※ Applies duplex fiber or single fiber to connect the transmitter and the receiver
- ※ Supports lossless 4K video up to 3840x2160/30P, 4096x2160/24P, 3840x2160/60P(4:2:0), 4096*2160/60P(4:2:0), 1920x1080/60P, Compatible with other VESA standard resolutions and user-defined resolutions
- ※ Support 3840*2160/30P resolution with color depth up to 8 bits/pixe
- ※ HDCP 1.4 Compatible
- ※ EDID pass-through, Support 3D TV pass-through
- ※ Transmitter Support Stereo Audio in, and HDMI audio decoding output (SPDIF out and Stereo Audio out)
- ※ Automatic switching between external Stereo Audio in and HDMI internal audio
- ※ Receiver Support HDMI audio decoding output (SPDIF out and Stereo Audio out)
- ※ Receiver built-in Re-time chip, jitter Cleaning for best compliance
- ※ Supports distance transmission up to 300m
- ※ Low RFI / EMI profile for sensitive applications
- ※ Plug-and-play, Hot-pluggable, Rack-mountable

Note:

The maximum transmission distance may vary depending on the fiber type, bandwidth, connector splicing, losses, model, chromatic dispersion, environmental factor, and kinks.

Applications

- ※ KVM Seat Collaboration Manage System
- ※ Remote monitor for traffic, industrial, military control
- ※ Airplane On-board Video System
- ※ Passenger Information System
- ※ Factory assembly line
- ※ TV Broadcast Station
- ※ LED signboards in streets and in stadiums
- ※ Large video wall system
- ※ LCD, Projector, Plasma display connection
- ※ Medical Imaging Equipment
- ※ Conference Room Video Equipment
- ※ Home Theater

©2013 Smart Optical Communication Co., Ltd. All Rights Reserved.



All trademarks are the property of their respective owners. we reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.





Specification

Video	HDMI v1.4,DVI 1.0
Max. Pixel Clock	340 MHz
Max. Data Rate	10.2 Gbps (3.4 Gbps Per Lane)
Max. Resolution	3840x2160/60P(YCbCr 420),4096*2160/60P(YCbCr 420),3840x2160/30P,4096x2160/24P, 1920x1200/60P,1920x1080/60P, Compatible with other VESA standard resolutions and user-defined resolutions
Digital Audio Support	7.1 channel LPCM, 192 kHz, 24-bit
Connections	
HDMI Input / Output	TX: 1 x DVI 24+1 Female RX: 1 x DVI 24+1 Female
FIBER	1x SFP+
Audio	Transmitter:1x Stereo Jack Female(Green),1x Stereo Jack Female(Blue),1x RCA Receiver:1x Stereo Jack Female(Green), 1x RCA
Fiber Optics	
Fiber Cable Type /Max. Length	50/125μ OM3: ≤300m (Default)
	9/125μ Single mode fiber: ≤300m (Default)
	9/125μ Single mode fiber: ≤300m (Max. Length)
Control	
KVM	N/A
Audio	Transmitter: Stereo Audio in,and HDMI audio decoding output(SPDIF and Stereo Audio out) Receiver : HDMI audio decoding output(SPDIF out and Stereo Audio out)
IR/RS232/RS485/CEC	N/A
DDC (Digital Display Channel) /HDCP	
EDID	Passthrough
HDCP	Passthrough
Physical Properties	
Housing	Alufer enclosure
Dimensions (W x D x H)	117.4mm x 114mm x 29 mm (without bracket) 160.4mm x 114mm x 29 mm (with bracket)
Weight	DFX-5250T: 400g DFX-5250R: 450g
Environmental	
Operating Temperature	0 to +50° C
Storage Temperature	-40°C to +85°C
Operating Humidity	5% to 80% (non-condensing)
Storage Humidity	5% to 95% (non-condensing)
Power Requirements	
External AC Power Adapter	Input: 100-240VAC / 50-60Hz 0.2A Output: DC 5V, 2.0A 5/2.5mm jack
Power Consumption	DFX-5250T: 5 W DFX-5250R: 5W
Warranty	
Limited Warranty	2 year warranty

TRANSMITTER

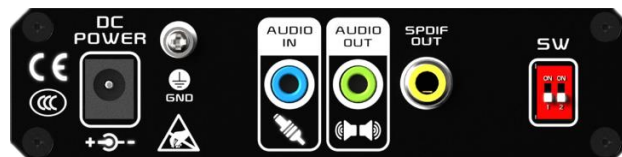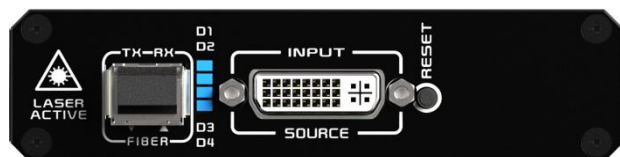


RECEIVER

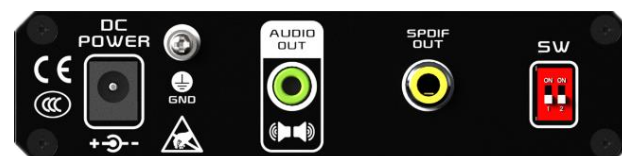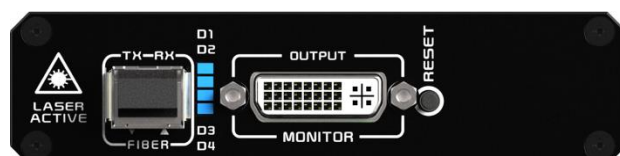

Port	TRANSMITTER	RECEIVER
DVI Port	DVI INPUT: DVI signal input	DVI OUTPUT: DVI signal output
RESET	System reset botton /EDID R/W botton	System reset botton
POWER	Power adapter socket	Power adapter socket
FIBER	SFP+ Module Cage	SFP+ Module Cage
USB	Connect to PC USB Host Controller	USB Keyboard x1 and USB Mouse x1 or USB Touch Screen x1
Audio	Stereo Jack Female(Blue):Stereo Audio in Stereo Jack Female(Green): Stereo Audio out RCA Jack:SPDIF out	Stereo Jack Female(Green): Stereo Audio out RCA Jack:SPDIF out
GND	Equipment grounding should be connected to the lightning protection grounding or static grounding of the machine room	
LED indicator		
D1	ON: Power on OFF: Power off	ON: Power on OFF: Power off
D2	ON: External audio OFF: HDMI Internal audio EDID Copy: When the monitor is connected to the HDMI input, press the reset button, the LED will flash rapidly for 32 times, and the LED will turn off after the copy is successful	Reserve
D3	OFF:SFP+ RX is normal ON: SFP+ RX lost Optical signal	OFF:SFP+ RX is normal ON: SFP+ RX lost Optical signal
D4	ON: Source connected Blinking:Output signal	ON: Monitor connected Blinking:Output signal


Diagram

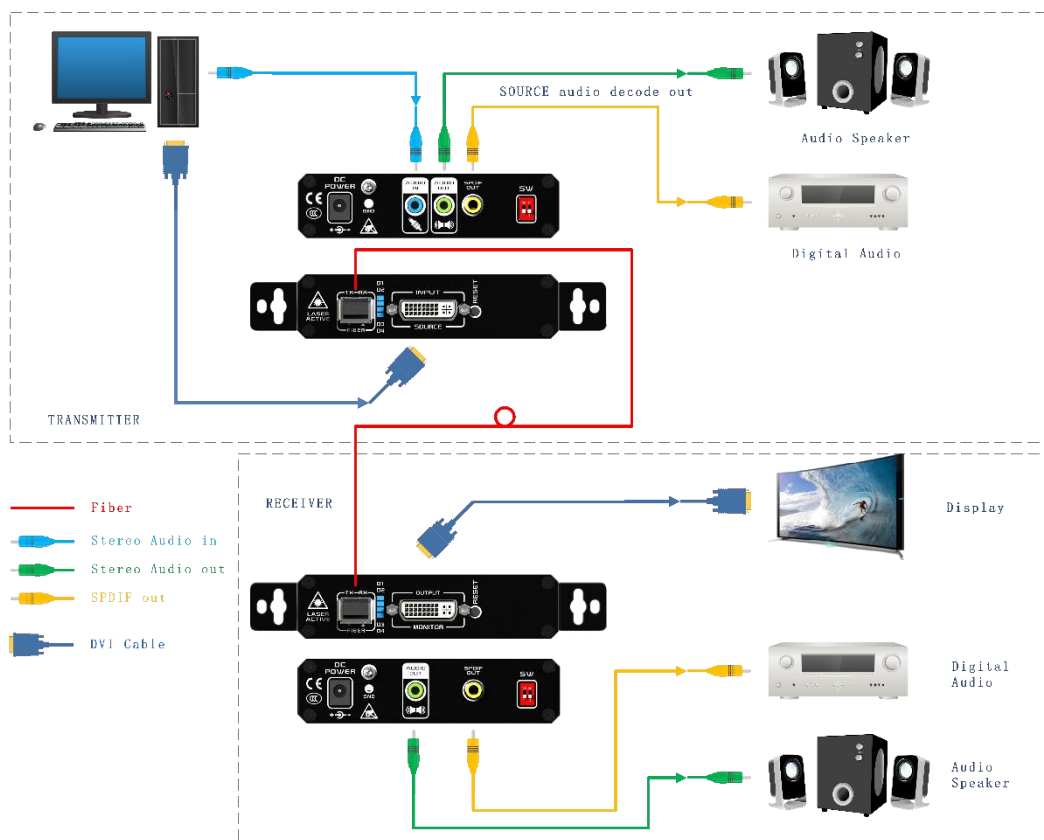

Instructions

Video	
1.	TX: Connect the source device's DVI Out port to the TX unit.
2.	RX: Use an DVI cable to connect your video display to the DVI Out port on the RX unit.
Fiber	
3.	Plug the SFP+ Modules to the Optical Ports on your TX unit and RX unit, and then connect the two SFP+ modules using a duplex fiber optic cable.
EDID Copy	
4.	1. Connect your display to the TX unit. Power on the TX unit, display. 2. pressing the reset button, D2 indicator will flash for a few seconds, The D2 turn off indicates that the program is completed. 3. Connect your source device to the TX unit. Connect your display to the RX unit, Power on the TX unit, RX unit again.
Audio	
5.	1. TX: Connect the source device's Audio Out port to the Stereo Audio In (Blue), Connect the Stereo Audio Out and SPDIF out port to the audio device's Audio in. 2. RX: Connect the Stereo Audio Out and SPDIF out port to the audio device's Audio in.
Power	
6.	Plug the Power Adapter cable into the Power Jack on the TX unit and RX unit. Power on the TX unit, RX unit, and the connected devices.
Reset	
7.	If the Extender fault during operation, the system can be reset by pressing the reset button, which can solve some Extender faults. If the fault cannot be eliminated by pressing the reset button, please power on the equipment again.

Dimensions (mm)

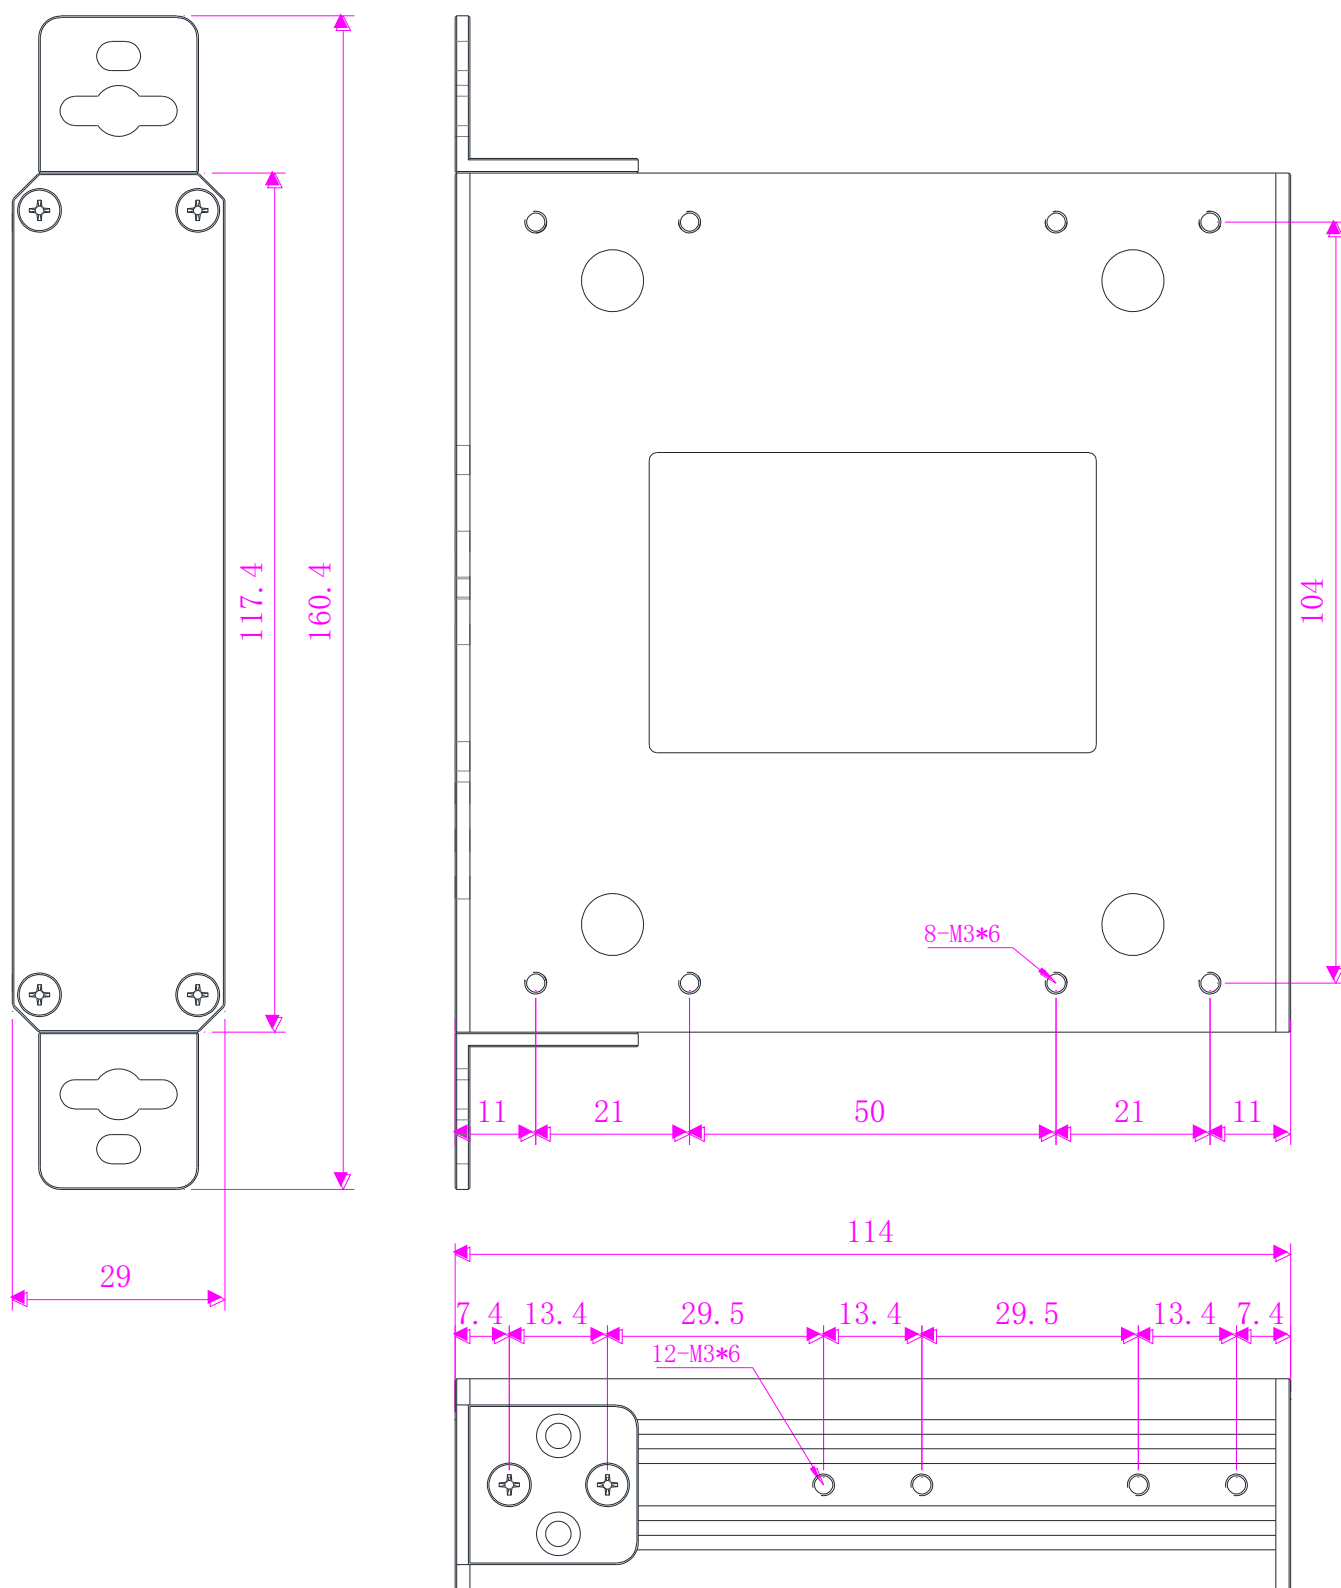

Packing list

The 4K DVI Fiber Optic Extender ships with the items listed below. If any of these items are not present in the box when you first open it, immediately contact your dealer or Smartopcom.

- ※ 1 x DFX-5250T (TX)
- ※ 1 x DFX-5250R (RX)
- ※ 2 x 5V/2A DC Power adapter
- ※ 1 x Datasheet

Ordering information

P/N	Description
DFX-5250T/R	Duplex Fiber 4K DVI Fiber Optic Extender with Audio,300m
DFX-5250T/R-D1.4	Duplex Fiber 4K DVI Fiber Optic Extender with Audio,1.4Km
DFX-5250T/R-D10	Duplex Fiber 4K DVI Fiber Optic Extender with Audio,10Km
DFX-5250T/R-D20	Duplex Fiber 4K DVI Fiber Optic Extender with Audio,20Km
DFX-5250T/R-D40	Duplex Fiber 4K DVI Fiber Optic Extender with Audio,40Km
DFX-5250T/R-D60	Duplex Fiber 4K DVI Fiber Optic Extende with Audio r,60Km
DFX-5250T/R-D80	Duplex Fiber 4K DVI Fiber Optic Extender with Audio,80Km
DFX-5250T/R-S10	Single Fiber 4K DVI Fiber Optic Extender with Audio,10Km
DFX-5250T/R-S20	Single Fiber 4K DVI Fiber Optic Extender with Audio,20Km
DFX-5250T/R-S40	Single Fiber 4K DVI Fiber Optic Extender with Audio,40Km
DFX-5250T/R-S60	Single Fiber 4K DVI Fiber Optic Extender with Audio,60Km
DFX-5250T/R-S80	Single Fiber 4K DVI Fiber Optic Extender with Audio,80Km
FSE-01	Bracket

Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your.
13. hands are wet or damp. Do not expose this product to rain or moisture.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Unplug this apparatus during lightning storms or when unused for long periods of time.
16. Batteries that may be included with this product and/or accessories should never be exposed to open flame or excessive heat. Always dispose of used batteries according to the instructions.

Rack Mounting

1. Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
2. Always load the rack from the bottom up, and load the heaviest item in the rack first.
3. Make sure that the rack is level and stable before extending a device from the rack.
4. Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
5. Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
6. Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
7. Ensure that proper airflow is provided to devices in the rack.
8. Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
9. Do not step on or stand on any device when servicing other devices in a rack.